

**SPECIFICATION SHEET**

**JFW MODEL 75PA-076**

**PROGRAMMABLE ATTENUATOR ASSEMBLY**

JFW Industries, Inc.  
Phone: 317-887-1340  
sales@jfwindustries.com  
www.jfwindustries.com

Frequency Range	DC-2150 MHz
Configuration	Two individually controlled electro-mechanical programmable attenuators
Impedance	75 Ohms nominal
Attenuation Range	0-63 dB in 1 dB steps
Startup/Default States (configurable)	RF switches off at startup (see SWITCH command) Attenuators to 64dB at startup (see ATTEN command) Maximum attenuation (see ATTEN command) DHCP enabled (see NET command) 4 Ethernet users (see NET USERS command) Prompts off (see PROMPT command)  All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users
VSWR	1.6:1 maximum
Attenuation Accuracy (guaranteed monotonic)	1-31 dB ± 0.6 dB or 3% 32-63 dB ± 4% (whichever is greater)
Insertion Loss	1.25 dB typical @ 1000MHz 2.25 dB typical @ 2150MHz 2.75 dB maximum DC-2150MHz
RF Input Power	+27 dBm average
Switching Speed	6 milliseconds typical (after command is received and processed) (3 milliseconds typical processing time)
AC Supply	100-240 VAC @ 47-63 Hz
Manual Control	20-Button Keypad and LCD display (IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)
Remote Control	Ethernet (DHCP, TCP/IP, 10/100, up to 12 users) RS-232 (Up to 115200 Baud)

**--CONTINUED--**

**SPECIFICATION SHEET**

**JFW MODEL 75PA-076**

**PROGRAMMABLE ATTENUATOR ASSEMBLY**

JFW Industries, Inc.  
Phone: 317-887-1340  
sales@jfwindustries.com  
www.jfwindustries.com

Remote Commands

Attenuator Control Commands:

Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime, Prompt

RF Connector


F female

Operating Temperature Range

0°C to +50°C

Physical Size

See outline drawing 092-7915

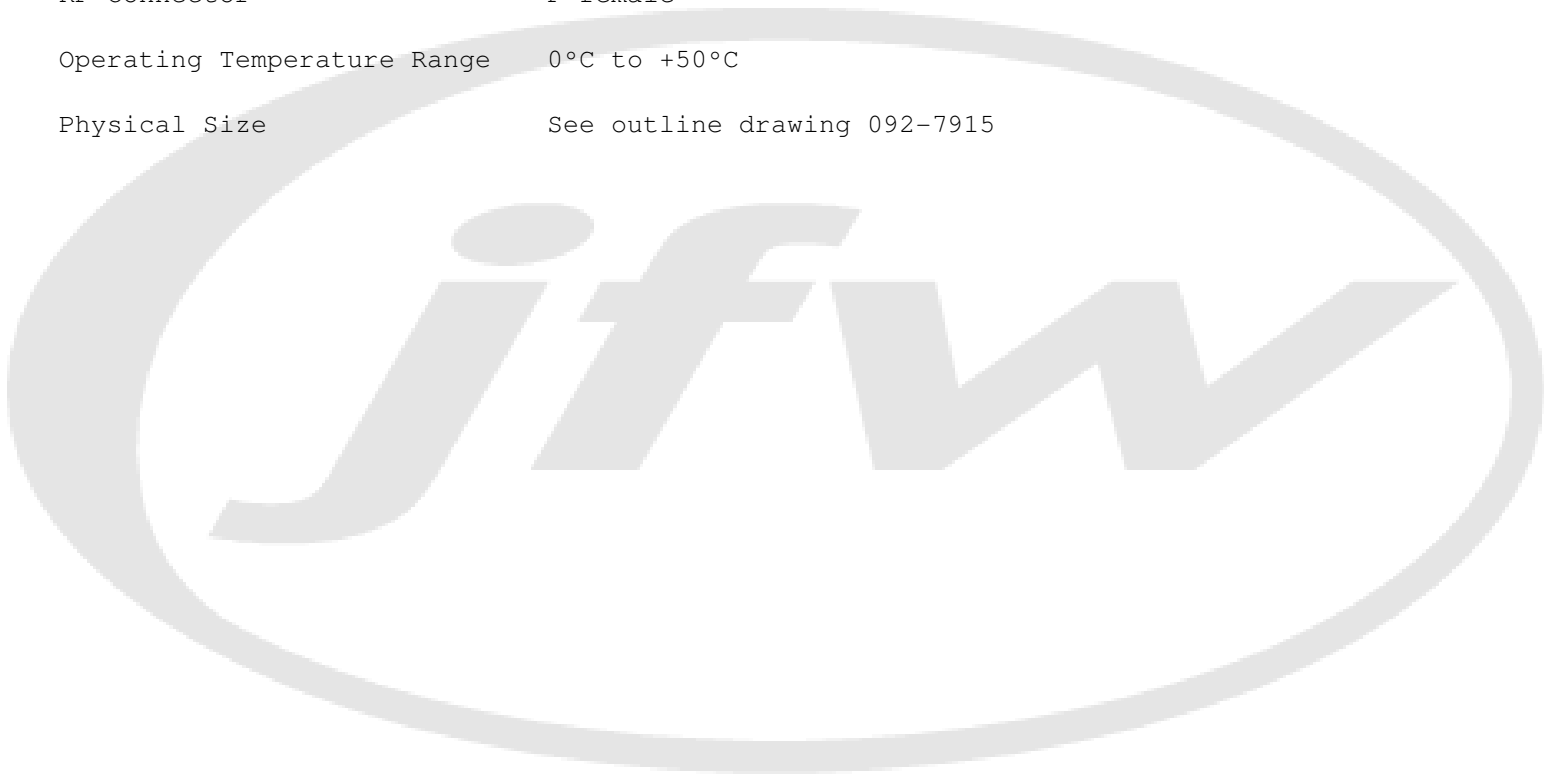

ECR/ECN #	DATE	REV	APPR / DATE	ECR/ECN #	DATE	REV	APPR / DATE
	01/27/2014		BAC 01/27/2014				
25583	07/27/2015	A	BAC 07/27/2015				

